




## **USB-C**

61W Power Adapter

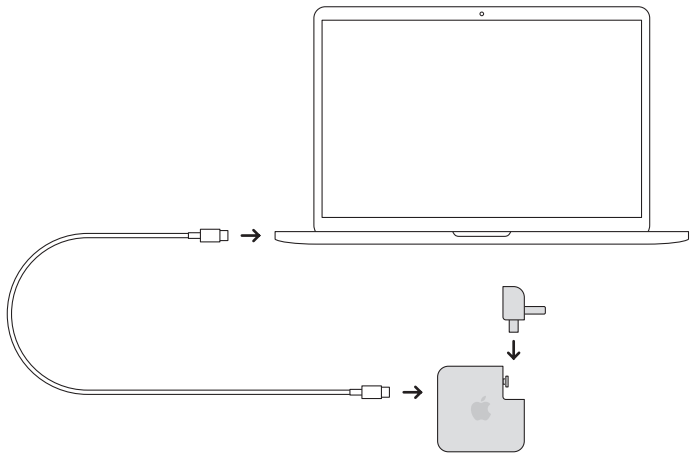

Use the Apple 61W USB-C Power Adapter and a USB-C cable to charge your USB-C device. Use any Apple USB-C cable, or the one that came with your device.

#### **To charge your device:**

1. Connect a USB-C cable to the power adapter, extend the electrical prongs (if necessary), and plug the power adapter firmly into a power outlet. Do not connect or disconnect the Apple 61W USB-C Power Adapter with wet hands.
2. Connect the other end of the cable to your USB-C device.

#### **Safety information**

**WARNING:** Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage.

The power adapter may become very warm during normal use. The power adapter complies with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1). However, even within these limits, sustained contact with warm surfaces for long periods of time may cause discomfort or injury. To reduce the possibility of overheating or heat-related injuries:

- Always allow adequate ventilation around the power adapter and use care when handling it.
- Use common sense to avoid situations where your skin is in prolonged contact with the power adapter when it's plugged into a power source. For example, don't sleep with the power adapter when it's plugged into a power source.
- Take special care if you have a physical condition that affects your ability to detect heat against the body.

Don't use the power adapter in wet locations, such as near a sink, bathtub, or shower stall, and don't connect or disconnect the power adapter with wet hands.

Unplug the Apple 61W USB-C Power Adapter if any of the following conditions exists:

- The USB cable has become frayed or damaged.
- The plug part of the adapter or the adapter case has become damaged.
- The adapter is exposed to rain, liquid, or excessive moisture.
- You suspect the adapter needs service or repair.
- You want to clean the adapter.
- The adapter has been dropped.

If debris gets into the power port, remove it gently with a dry cotton swab.

### **Specifications**

- Input: AC 100–240 volts (V), 50–60 hertz (Hz)
- Output: DC 20.3V, 3A or 9V, 3A or 15V, 3A or 5.2V, 3A